

cod. 3414


Parafango anteriore BMW R18 Front mudguard for BMW R18



ATTENZIONE!

Leggere attentamente il foglio 'Informazioni importanti' prima di procedere.

Carefully read the 'Important informations' sheet before starting.

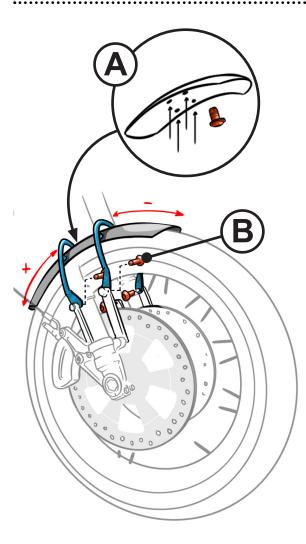

EN Mount the mudguard on the arched frames using the M6 screws (A) from below. As indicated in the drawing, we recommend turning the longer part of the mudguard towards the engine.

Install the frames attached on the bike using the M8 screws indicated in B on the supports of the fork legs; if at the end of the assembly the fender is not perfectly centred over the wheel. loosen the screws, realign it and tighten again.

IT Montare il parafango sui telai ad arco utilizzando le viti A M6 da sotto. Come indicato nel disegno, consigliamo di rivolgere la parte più lunga del parafango verso il motore della moto.

Montare il tutto sulla moto utilizzando le viti M8 indicate in B sui quattro supporti dei piedini forcella; se alla fine del montaggio non fosse centrato perfettamente, allentare viti, riposizionarlo e stringere nuovamente.



cod. 3414

Parafango anteriore BMW R18 Front mudguard for BMW R18




ATTENZIONE!

Leggere attentamente il foglio 'Informazioni importanti' prima di procedere.

WARNING!

Carefully read the 'Important informations' sheet before starting.

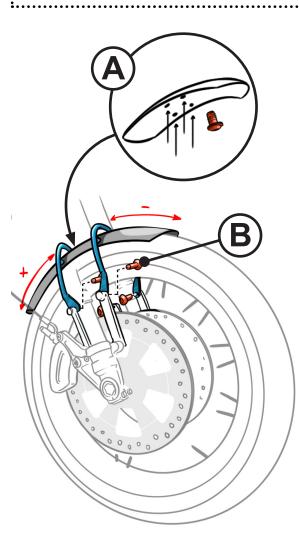

EN Mount the mudguard on the arched frames using the M6 screws (A) from below. As indicated in the drawing, we recommend turning the longer part of the mudguard towards the engine.

Install the frames attached on the bike using the M8 screws indicated in B on the supports of the fork legs; if at the end of the assembly the fender is not perfectly centred over the wheel, loosen the screws, realign it and tighten again.

IT Montare il parafango sui telai ad arco utilizzando le viti A M6 da sotto. Come indicato nel disegno. consigliamo di rivolgere la parte più lunga del parafango verso il motore della moto.

Montare il tutto sulla moto utilizzando le viti M8 indicate in B sui quattro supporti dei piedini forcella; se alla fine del montaggio non fosse centrato perfettamente. allentare viti, riposizionarlo e stringere nuovamente.







